

## **LOW TAB ID NOS.**

At first start of the BridgeTab a starting ID number between 10000 and 65000 is randomized. It should not be possible for low numbers to be generated but if it has happened it must be fixed in the following way:

### **REMOVE (or amend) CORRUPT ID NO. FILE**

1. Locate the file C:\BOS\Bridgescorer\nextip
2. Either delete the file, or open it and write a large number(e.g. 15000)

### **RESET BRIDGETABS**

Each and all BridgeTabs that have a number lower than 10000 must be reset in the following way:

- i. Go to Settings and choose Dummy mode.
  - ii. Exit Dummy mode. (This will reset the hardware id on that Bridgetab)
3. Click start button on Bridgetab to get a new ID number from the server.

Last revised 151217